

# Piston shaft STJ

Pos.	Part No.	Pcs.	Description	Type/remarks
2:1	00539-01	1	Lock nut	
2:2	00578-01	var.	Washer	
2:3	00519-02	1	Stop washer	
2:4	-		Shims	
2:5	05114-24	1	Piston 46	
2:6	00541-01	1	Piston ring 46	
2:7	03068-01	1	Stop washer	
2:8	00436-01	1	Circlip	
2:9	05619-01	1	Seal head assy.	
9.1	01056-15	1	Bushing	
9.2	00338-24	1	O-ring	
9.3	05615-01	1	Seal head	
9.4	00827-01	1	X-ring	
9.5	01032-03	1	Back-up ring	
9.6	03070-01	1	Scraper	
2:10	00438-28	1	O-ring	
2:11	05610-01	1	Nut	
2:12	05609-00	1	Shaft jet bleed	Plugged
	05609-05	1	Shaft jet bleed	ø 0.5 mm
	05609-07	1	Shaft jet bleed	ø 0.7 mm
	05609-10	1	Shaft jet bleed	ø 1.0 mm
	05609-14	1	Shaft jet bleed	ø 1.4 mm
	05609-20	1	Shaft jet bleed	ø 2.0 mm
	05609-28	1	Shaft jet bleed	ø 2.8 mm
	05609-40	1	Shaft jet bleed	ø 4.0 mm
2:13	05426-01	1	Plug	
2:14	05608-01	1	Shaft	STJ 15400/15450
	05608-02	1	Shaft	STJ 17500/17550
	05608-03	1	Shaft	STJ 19600/19650
	05608-04	1	Shaft	STJ 21700/21750
	05608-05	1	Shaft	STJ 23800/23850
	05608-06	1	Shaft	STJ 25900/25950
2:15	05621-03	1	Shaft jet bleed	
2:16	00338-14	1	O-ring	
2:17	05655-03	1	Adjusting needle	
2:18	00566-75	1	Adjusting rod	STJ 15400/15450
	00566-44	1	Adjusting rod	STJ 17500/17550
	03566-07	1	Adjusting rod	STJ 19600/19650
	00566-13	1	Adjusting rod	STJ 21700/21750
	03566-08	1	Adjusting rod	STJ 23800/23850
	03566-09	1	Adjusting rod	STJ 25900/25950
2:19	00557-01	2	Circlip	
2:20	05536-15	1	Ball joint	
2:21	05611-01	1	End eye	
2:22	01016-01	2	Seal rebound adjuster	
2:23	01030-01	1	Pin	
2:24	01128-01	1	Adjuster knob	
2:25	05612-01	1	End eye	

2

